MENU OF DIGITAL DISPLAY CARD

):Layout of speed display card

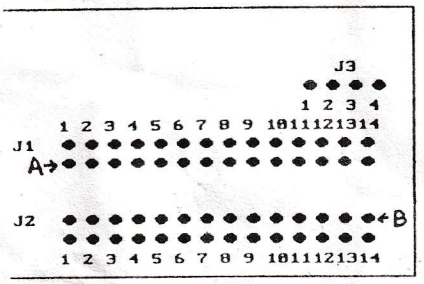

C:J1-3 Setting

J1: is used to set turbo frequency

J2: is used to set normal frequency

J3-2: is used to connect main board turbo LED

- if connect to '+' is setting normal "L", turbo "H"
- if connect to '—' is setting normal "H", turbo "L"

J3-3: is used to connect to power cable '—'

J3-4: is used to connect to power cable '+'

J3-1: is used to connect turbo LED '+'

- if setting normal "L", turbo "H" the turbo LED '—' to connect J1 one of 'A'
- if setting normal "H", turbo "L" the turbo LED '—' to connect J2 one of 'B'

): Frequency Setting :

NORMAL (N/H)		TURBO (N/L)		TURBO (N/H)		NORMAL (N/L)	
Two Digital		Single Digital		Two Digital		Single Digital	
Jumper pin	J1	Jumper pin	J1	Jumper pin	J2	Jumper pin	J2
1 MHz		1 MHz		1 MHz		1 MHz	
2 MHz		2 MHz		2 MHz		2 MHz	
3 MHz		3 MHz		3 MHz		3 MHz	
4 MHz		4 MHz		4 MHz		4 MHz	
5 MHz		5 MHz		5 MHz		5 MHz	
6 MHz		6 MHz		6 MHz		6 MHz	
7 MHz		7 MHz		7 MHz		7 MHz	
8 MHz		8 MHz		8 MHz		8 MHz	
9 MHz		9 MHz		9 MHz		9 MHz	
0 MHz		0 MHz		0 MHz		0 MHz	

POWER SWITCH SETTING

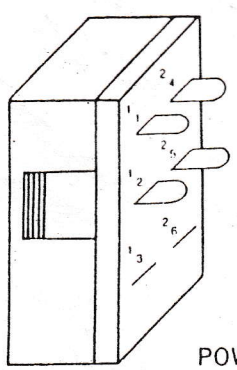

POWER SWITCH